

## Makita Air Compressor Part Breakdown - MODEL MAC2400

Item	Description	Part #	Qty	Item	Description	Part #	Qty
1	Cylinder head	101009-E	1	38	Exhaust valve seat	114001-E	1
2	Valve seat to head gasket	211001-E	1	39	Oil gauge gasket	217001-E	1
3	Inlet valve seat	104001-E	1	40	Air tank	401124-E	1
4	Inlet & Exhaust valve seat gasket	212001-E	1	41	Pressure gauge	411029-E	2
5	Inlet & Exhaust valve plate	125001-E	2	42	Regulator	410028-E	1
6	Inlet & Exhaust spring plate	127001-E	2	43	Rubber handle	435016-E	1
7	Crankshaft bolt	352106-E	1	44	Tank foot assembly	434006-E	4
8	Valve plate screw	126001-E	4	45	Quick coupler (1/4")	447013-E	2
9	Cylinder head bolt	352087-E	4	46	Safety valve (1/4")	407001-E	1
10	Spring washer for head bolt	382011-E	4	47	Drain cock	413008-E	1
11	Exhaust Elbow	151404-E	1	48	Check valve	409004-E	1
12	Discharge tube assembly	230076S-E	1	49	Power cord	452005-E	1
13	Unloading Elbow	151001-E	3	50	Pressure switch	412024-E	1
14	Nipple	441025-E	1	51	Regulator nipple	441001-E	1
15	Valve seat to cylinder gasket	213001-E	1	52	Unloading tube assembly(1/4")	228038-E	1
16	Cylinder	201017-E	1	53	Motor fan	431005-E	1
17	Piston	203011-E	1	54	Unloading elbow	151002-E	1
18	Compression ring	206003-E	2	55	Plug for pr.switch manifold	360002-E	2
19	Oil control ring	207003-E	1	56	Manifold block	421006-E	1
20	Piston pin	204003-E	1	57	Handle plug	439009-E	2
21	Piston pin snap ring	205001-E	2	58	Elbow	151209-E	1
22	Cylinder to crankcase gasket	214001-E	1	59	Elbow	151209-E	1
23	Set nut (cylinder to crankcase)	371005-E	2	60	Air filter (element only)	171006-E	1
24	Spring washer (cyl to crankcase)	382005-E	2	61	Ring kit (#18 and 19)	RK2400-E	1
25	Double head screw	358001-E	2	62	Valve kit (#5,6,and 8)	VK2400-E	1
27	Crankcase cover gasket	215001-E	1	63	Gasket kit (#2,4,15,and 22)	GK2400-E	1
28	Crankshaft	302001-E	1	64	Bolt for console	365003-E	8
29	Crankcase cover	304015-E	1	65	Spring washer for motor cover	382004-E	4
30	Connecting rod	316001-E	1	69	Start Capacitor	460008-E	1
31	Oil sight gauge	321001-E	1	70	Run Capacitor	462009-E	1
32	Oil draining plug	360001-E	1	71	Overload Switch	458003-E	1
33	Motor cover	433011-E	1	72	Centrifugal Switch	459001-E	1
34	Motor / crankcase cover bolt	352071-E	9	73	Control Panel	488002-E	1
35	Air filter assembly	170013-E	1	74	Guard Plate	488003-E	1
36	Oil filler/crankcase breather	324003-E	1	75	Base Plate	488004-E	1
37	Electric motor / Crankcase	251332-E	1		Compressor oil (1 quart)	181122-A	1

