



Model XFD061 Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty Unit
001	187714-9	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2 PC.
	D10	INC. 21	
002	814U19-7	XFD06 NAME PLATE	1
003	266429-2	TAPPING SCREW 3X16	9 PC.
004	419250-0	F/R CHANGE LEVER	1 PC.
005	650710-5	SWITCH C3JW-4B	1
006	619331-2	ROTOR	1
007	629999-6	STATOR	1 PC.
008	620244-2	LED CIRCUIT	1
009	643860-3	TERMINAL	1 PC.
010	126180-5	SPEED CHANGE LEVER ASSEMBLY	1 PC.
	C10 233438-6	COMPRESSION SPRING 4	2 PC.
011	232182-2	LEAF SPRING	1 PC.
012	251468-5	- FLAT HEAD SCREW M6X22	1 PC.
013	766027-7	KEYLESS DRILL CHUCK 13	1 PC.
014	126354-8	GEAR ASSEMBLY	1
015	266786-8	+ PAN HEAD TAPPING SCREW 2X10	4 PC.
016	620245-0	CONTROLLER	1
017	687464-1	SUPPORT	1 PC.
018	424517-3	CUSHION	1 PC.
019	142263-3	INDICATOR PANEL COMPLETE	1
020	802A04-2	CAUTION LABEL	1
021	187714-9	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2 PC.
	D10	INC. 1	
022	802A05-0	CAUTION LABEL	1
A01	251314-2	+ SCREW M4X12	1 PC.
A02	346449-3	HOOK	1 PC.
A04	***DC18RC	DC18RC FAST CHARGER	1 PC.
A05	BL1830B	BATTERY BL1830B SET (197601-4)	1
A07	831274-0	TOOL BAG	1