



Model XPH16Z Parts List

Item#	Part#	Description	Q'ty
001	8585E0-7	XPH16 NAME PLATE	1
002	127494-5	SPEED CHANGE LEVER ASSEMBLY	1
	C10 233438-6	COMPRESSION SPRING 4	2
003	419041-9	F/R CHANGE LEVER	1
004	232220-0	LEAF SPRING	2
005	1911S7-7	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2
	C20 252126-6	HEX. LOCK NUT M4-7	2
	C30 8063C8-9	CAUTION LABEL	1
	D10	INC. 17	
006	266130-9	TAPPING SCREW BIND PT 3X16	7
007	763261-0	KEYLESS DRILL CHUCK 13	1
008	650710-5	SWITCH C3JW-4B	1
009	251468-5	- FLAT HEAD SCREW M6X22	1
010	620549-0	LED CIRCUIT	1
011	266326-2	TAPPING SCREW 4X18	4
012	122D65-7	GEAR ASSEMBLY	1
013	629B98-6	STATOR COMPLETE	1
014	619797-6	ROTOR	1
015	413N33-4	REAR COVER	1
016	266130-9	TAPPING SCREW BIND PT 3X16	2
017	1911S7-7	HOUSING SET	1
	C10 263005-3	RUBBER PIN 6	2
	C20 252126-6	HEX. LOCK NUT M4-7	2
	C30 8063C8-9	CAUTION LABEL	1
	D10	INC. 5	
018	8585E8-1	XPH16 SERIAL NO. LABEL	1
019	643874-2	TERMINAL	1
021	424517-3	CUSHION	1
A01	251314-2	SCREW M4X12	1
A02	346449-3	HOOK	1