



Model XWT18XVZ Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
1	422607-6		1	
2	140U47-9	HAMMER CASE COMPLETE	1	
3	136299-2	INTERNAL GEAR CASE ASS'Y	1	
	D10	INC. 20,21		
4	253481-9	FLAT WASHER 20	1	
5	322045-1	CLIP	1	PC.
6	323675-1	PIN 4	1	PC.
7	136263-3	ANVIL AASS'Y	1	
	D10	INC. 5,6		
8	327624-0	HAMMER	1	
9	216001-0	STEEL BALL 3.5	33	PC.
10	267340-1	FLAT WASHER 32	1	PC.
11	232629-6	COMPRESSION SPRING 34	1	PC.
12	216007-8	STEEL BALL 6.4	2	PC.
13	227813-6	SPUR GEAR 21	3	
14	327623-2	SPINDLE	1	
15	256211-7	PIN 6	3	PC.
16	267494-4	FLAT WASHER 25	1	PC.
17	347722-4	RETAINER	1	PC.
18	227814-4	INTERNAL SPUR GEAR 48	1	
19	213624-5	O RING 48	1	PC.
20	213654-6	O RING 60	1	PC.
21	213961-7	O RING 22	1	PC.
22	210069-8	BALL BEARING 6900DDW	1	PC.
23	519635-1	ROTOR ASS'Y	1	
	D10	INC. 22,24		
24	211343-7	BALL BEARING 688ZZ	1	
25	629A07-9	STATOR COMPLETE	1	
26	857X53-2	XWT18XV NAME PLATE	1	
27	251476-6	H.S.H.BOLT M5X35 WITH WR	4	PC.
028-1	191M82-2	HOUSING SET	1	PC.
	C10	8018U0-6 CAUTION LABEL	1	
	D10	INC. 36		
29	266326-2	TAPPING SCREW 4X18	7	PC.
30	266326-2	TAPPING SCREW 4X18	4	PC.
31	412706-2	REAR COVER	1	
32	620549-0	LED CIRCUIT	1	PC.
33	456268-0	F/R CHANGE LEVER	1	PC.
34	140U03-9	SWITCH COMPLETE	1	PC.
	C10	424774-3 SWITCH COVER	1	
35	140V01-9	SWITCH PLATE COMPLETE	1	
	C10	8012S9-8 SWITCH LABEL	1	
036-1	191M82-2	HOUSING SET	1	PC.
	C10	8018U0-6 CAUTION LABEL	1	
	D10	INC. 28		
37	424773-5	CUSHION RUBBER	1	PC.
38	424773-5	CUSHION RUBBER	1	PC.
39	268284-8	PIN 1.5	1	PC.
40	183P89-0	BATTERY HOUSING SET	1	PC.

C10	263005-3	RUBBER PIN 6	2 PC.
C20	252126-6	HEX. LOCK NUT M4-7	2 PC.
	D10	INC. 44	
41	263036-2	RUBBER PIN 5	1 PC.
42	643874-2	TERMINAL	1 PC.
43	424517-3	CUSHION	1 PC.
44	183P89-0	BATTERY HOUSING SET	1 PC.
C10	263005-3	RUBBER PIN 6	2 PC.
C20	252126-6	HEX. LOCK NUT M4-7	2 PC.
	D10	INC. 40	
45	857X54-0	XWT18XV SERIAL NO. LABEL	1
46	652077-7	FLAT HEAD SCREW M3X6	1 PC.
A01	251314-2	SCREW M4X12	1 PC.
A02	347723-2	HOOK	1